



SEAT COVER INSTALLATION INSTRUCTIONS

TOOLS NEEDED: ELECTRIC STAPLE GUN, 3/8" STAPLES, HEAT GUN

INSTALLATION TIPS:

- BEFORE INSTALLATION IT IS RECOMMENDED TO LAY OUT THE SEAT COVER FOR 2 HOURS PREFERABLY IN THE SUN OR A WARM AREA.
 - a. GENTLE HEAT FROM A HEAT GUN CAN SPEED THIS PROCESS UP. USE CAUTION NOT TO BURN THE COVER OR THE SEAT PAN.
 - BE SURE TO ONLY INSTALL YOUR NEW COVER TO A CLEAN AND DRY SEAT
 - GO SLOW. TAKING YOUR TIME AND PROPERLY STRETCHING THE FABRIC WILL RESULT IN A BETTER FIT.
- 1) REMOVE OLD SEAT COVER AND ANY STAPLES THAT REMAIN IN THE SEAT PAN
 - 2) START AT THE FRONT OR NOSE OF THE SEAT AND ALIGN THE COVER STRAIGHT FRONT TO BACK CHECKING TO MAKE SURE THE COVER WILL HAVE AN ACCEPTABLE FIT. CHECK THE BOTTOM OF SEAT PAN TO ENSURE THERE WILL BE ENOUGH FABRIC TO STAPLE THE COVER TO THE PAN.
 - 3) BEGIN BY PULLING THE COVER TIGHT AT THE FRONT AND WORKING YOUR WAY DOWN EACH SIDE STAPLING AS YOU GO. USE A DOWN AND FORWARD MOTION WITH THE STAPLE GUN. PUT A COUPLE TEMPORARY STAPLES ON THE BACK TO HOLD THE COVER IN PLACE IF YOU ARE HAVING TROUBLE KEEPING THE COVER CENTERED. BE SURE TO KEEP IT EVEN ALL THE WAY DOWN EACH SIDE. ONCE YOU GET TO THE BACK ALL THE WRINKLES SHOULD HAVE BEEN WORKED OUT.
 - a. REMOVE TEMPORARY STAPLES IF USED
 - 4) TRIM AN EXCESS FABRIC

IMPORTANT: DO NOT OVER TIGHTEN. YOU COULD TEAR THE COVER AND/OR THE SEAT PAN COULD BECOME WARPED

IF USING A PNEUMATIC STAPLE GUN USE CAUTION AS THE STAPLES CAN BE DRIVEN THROUGH THE THIN AREAS ON THE SIDES OF THE FRAME AND PUNCTURE YOUR NEW COVER.

AFTER THE FIRST RIDE INSPECT THE BOTTOM OF SEAT CHECKING THAT ALL THE STAPLES ARE INTACT AND THERE ARE NO TEARS AT THE STAPLE LOCATIONS.