



Element

- 1. Power - On** - Press **Red** button for 3 seconds
Off - Press **Red** button for 5 seconds
- 2. Set Channel** - Press **Blue** button until display blinks
Press **Red** button to advance 100 channels at a time
Press **Arrow buttons < >** to scroll up/down to channel
Press **Blue** button to lock on channel, blinking stops
- 3. Set Volume** - Press **Arrow buttons < >** up/down to adjust audio level
- 4. Change Default Channel** - (Set Channel See above)
Hold both **Arrow buttons < >** down for 2 seconds
- 5. Button Lock** - Prevents accidental channel or volume change
Lock - Press the **Red & Right Arrow >** buttons together for 5 sec
"LOC" will blink on the display
UnLock - Press the **Red & Right Arrow >** buttons together 2 sec
- 6. Squelch** A static filter. Default in ON. Indicator (SC) shows on the display. To test earpieces, turn squelch off by pressing **Left Arrow < & Blue** button at the same time, you should hear static. After 3 seconds, the static should go away when the squelch goes back to default ON
- 7. Charge Battery** Plug 3.5mm side of USB charging cable into the port on the left of the Element and the USB side into a power source. Battery indicator blinks while charging. Battery is fully charged when blinking stops (approx 4 hours)

Do Not Overcharge - this can damage the internal battery

To preserve battery life, power off when not in use

Element

Water & Dust Resistant with a Rechargeable internal battery

Race officials broadcast directly to drivers allowing faster line-ups, restarts and instant notification of track conditions

Coaches provide instant feedback motivating to improve skills & overall performance