

# CARR



 2020

**ACCESSORIES CATALOG**

TRUCKS | SUVs | OFF-ROAD | INDUSTRIAL | COMMERCIAL



# TABLE OF CONTENTS



“All CARR accessories are manufactured for a precise fit for today’s vehicles. Our manufacturing process allows us to design products that give your vehicle that unique personal style and appeal. All CARR products are designed to mount easily to your vehicle for a strong and stable installation. Our unique construction has proven, over time, its durability and strength. We also offer products to enhance the safety and accessibility of fleet vehicles of all sizes. All CARR products carry a limited lifetime warranty.”

– Jeff Carr

## TABLE OF CONTENTS

- NEW PRODUCTS.....2
- LD STEP .....3-4
- SUPER HOOP ..... 5-6
- HOOP II ..... 7-8
- WORK TRUCK STEPS.....9
- CARGO VAN STEPS .....9
- FACTORY STEP ..... 10
- GRAB HANDLES .....10
- MEGA STEPS.....11
- HD MEGA STEPS.....11
- UTILITY/MUNICIPALITY ..... 12
- FIRE/EMERGENCY ..... 12
- HEAVY DUTY UNIVERSAL HITCH STEP..... 13
- JL 180° LIGHT MOUNT.....14
- LIGHT WINGS .....14
- XRS JEEP ROTA LIGHT BAR .....15
- LIGHT BARS .....15-20
- PROMOTIONAL ITEMS .....21

## Our Story

In March of 1945, Vernon Lester Carr started V.L. Carr & Son Pattern Co. in an old metal shop behind his house in Los Angeles, California. His son, Wendell Whittaker Carr, joined his father Vernon later that year at the end of World War II after his return from serving as a patternmaker in the Navy. Twenty four years later in 1969 the business changed its name to Carr Pattern Co., its corporate name today. In May of 1972 Vernon Carr passed away, leaving his son Wendell with the family business. Notwithstanding his father’s passing, the business made the necessary adjustments and continued to press forward.

However, several years later in March of 1979, the untimely death of Wendell Carr left his wife and two sons, facing the decision to disband the business or continue making patterns for their existing customer base. The decision was made to stay in business, but the family eventually chose to shift away from pattern-making and pattern-casting and started looking for other business opportunities.

Early in 1983, a whole new industry opened up to them which was an entirely different industry than what had been their mainstay since 1945- the automotive aftermarket. Once the decision was made to change the course of the business into the automotive industry, investment money was gathered and the production facility was expanded. Extensive research, development, and design resulted in the introduction of aluminum cast light bars and truck steps, which were introduced at SEMA, where one of CARR’s products won second place, clearly establishing them as serious new competitors.

Today, CARR, as it is popularly known, is in virtually every major warehouse across the United States and Canada, and has established itself as a company whose accessories place it among the major competitors in the industry. With over 75 years of manufacturing excellence, CARR is a third-generation business, who remains firmly committed to product innovation and design, hassle-free customer service, and offering the consumer various choices in steps, light bars, and other accessories.







# NEW 20" Grab Handles

- Large 20" Heavy Duty Grab Handle
- Tested to handle extreme load capacity
- Built in Slip-Resistant Groves
- Available in 3 Colors: Black, Polished, Safety Yellow
- Designed for gloved hand to fit securely
- Universal fit for light, medium, and heavy duty trucks
- Ideal for cab access, three points of contact accessing vehicle, and side vehicle access




MADE  
IN THE  
USA



**BUILT FOR RUGGED USE!**

Wide 1 1/4" diameter provides solid handhold

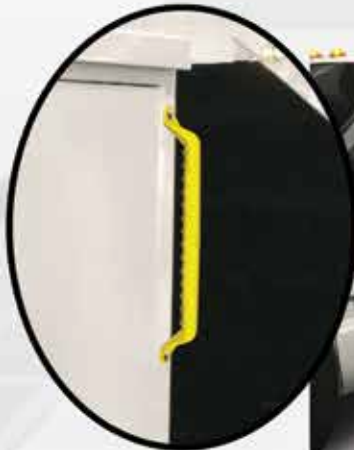

Details on Page 10



# LD STEP



## LD STEP

The LD step was actually inspired by Jeff Carr’s wife, Lynn. Hence the name “LD Step” (Lynn’s Design). This step gives the user easier access to the vehicle due to the wider and deeper stepping surface that extends further than our other steps. The LD step is available in our three durable finishes, and installation is a cinch with our mounting system.

**MADE  
IN THE  
USA**

### FEATURES

- Easier entry and exit from your vehicle
- 14” wide functional step area
- Extends further than our current steps
- Made of corrosion-resistant, durable cast aluminum alloy for extreme longevity
- NEW aggressive and appealing tread design for a non-slip surface
- Rocker panel installation provides for the strongest and easiest installation of any step products
- Unique design that enhances the looks of current vehicle body styles
- Limited lifetime warranty on materials and craftsmanship



XM3

#### POLISHED

CARR’s Xtreme Mechanical Polished finish won’t rust, crack or peel and requires very little maintenance.



XP4

#### TITANIUM SILVER

CARR’s Xtreme Titanium Silver Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.



XP3

#### BLACK

CARR’s Xtreme Black Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.

**DIMENSION:** 14” width

**STEP PAD:** Aggressive and appealing tread design for a non-slip surface

**STEP:** Flat step area for increased safety



# LD STEP APPLICATIONS



CHEVY/GMC	XM3 POLISH	XP4 SILVER	XP3 BLACK	XP7 YELLOW
'15 - '20 Colorado/Canyon	113332	113334	113331	113337
'02 - '09 Trail Blazer/Envoy	114032	114034	114031	114037
'02 - '13 Avalanche	114032	114034	114031	114037
'02 - '20 Denali Truck	114032	114034	114031	114037
'20 Sierra/Silverado 2500-3500 C&K P/U/Fullsize/All Cabs All Doors (GAS AND DIESEL)	113332	113334	113331	113337
'19 - '20 Sierra/Silverado 1500 C&K P/U/Fullsize all cabs (All doors)	113332	113334	113331	113337
'88 - '19 Sierra/Silverado 1500 C&K P/U / Fullsize / All Cabs / All doors - 2018 Body Style/Light Duty	114032	114034	114031	114037
'88 - '19 Sierra/Silverado 2500/3500 HD all doors	114032	114034	114031	114037
'11 - '19 *Sierra/Silverado 2500/3500 HD all cabs (DIESEL ONLY)	116332	116334	116331	116337
'88 - '18 Fullsize Crew Cab 1500-3500 (All doors)	114032	114034	114031	114037
'73 - '87 **Fullsize Pick-ups/Blazer/Suburban	114032	114034	114031	114037
'76 - '91 Suburban	114032	114034	114031	114037
'76 - '93 S10/Sonoma pickups, Blazer/Jimmy	114032	114034	114031	114037
'67 - '96 Fullsize Van	114032	114034	114031	114037
<b>DODGE</b>				
'19 - '20 Ram GAS 1500 NEW BODY STYLE	119112	119114	119111	119117
'09 - '20 Ram GAS 1500-5500 CLASSIC BODY STYLE	119772	119774	119771	119777
'09 - '20 Ram DIESEL 2500-5500 P/U beds only	119772	119774	119771	119777
'11 - '20 * Ram DIESEL 3500-5500 Chassis beds only	117442	117444	117441	117447
'09 - '10 Ram DIESEL 3500-5500 Chassis beds only	119772	119774	119771	119777
'94 - '08 Ram 1500-5500	114032	114034	114031	114037
'74 - '93 Fullsize P/U	114032	114034	114031	114037
'97 - '09 Dakota 2-Door Only	114032	114034	114031	114037
'02 - '06 Sprinter Van	114502	114504	114501	114507
'07 - '09 Sprinter Van	115772	115774	115771	115777
'74 - '92 Ram Charger	114032	114034	114031	114037
'83 - '91 Raider	114032	114034	114031	114037
<b>FORD/MERCURY</b>				
'17 - '20 Super Duty Aluminum body F250 - F550 DOES NOT FIT standard cabs (single cabs)	118222	118224	118221	118227
'99 - '16 Super Duty All Cabs (All Doors)	114872	114874	114871	114877
'15 - '20 F-150 Aluminum body All door/All cabs	118222	118224	118221	118227
'04 - '14 F-150 All Cabs (All Doors)	114032	114034	114031	114037
'01 - '03 F150 SuperCrew (All Doors)	114032	114034	114031	114037
'97 - '04 F-150/F-250 LD/F-150 Heritage P/U (All Doors)	114032	114034	114031	114037
'97 - '03 F-150 Quad Cab (All Doors)	114032	114034	114031	114037
'19 - '20 Ranger Super Crew - 4 door	114502	114504	114501	114507
'19 - '20 Ranger Super Cab - Front doors only	114502	114504	114501	114507
'98 - '11 Ranger 2-Door Only	114992	114994	114991	114997
'00 - '05 Excursion (All Doors)	114872	114874	114871	114877
'18 - '20 Expedition (All Doors)	118222	118224	118221	118227
'97 - '17 Expedition (All Doors)	114032	114034	114031	114037
'91 - '01 Explorer (not Eddie Bauer)	114032	114034	114031	114037
'96 - '01 Mercury Mountaineer	114032	114034	114031	114037
'75½ - '02 Fullsize E-Series Van	114032	114034	114031	114037
'05 - '14 Fullsize E-Series Van	114032	114034	114031	114037
'15 - '20 E-Series Cutaway Cab	114032	114034	114031	114037

ISUZU	XM3 POLISH	XP4 SILVER	XP3 BLACK	XP7 YELLOW
'84 - '02 Trooper	114032	114034	114031	114037
'91 - '02 Rodeo	114032	114034	114031	114037
'91 - '02 Amigo	114032	114034	114031	114037
'89 - '93 P/U	114032	114034	114031	114037
<b>JEEP</b>				
'06 - '10 Commander	114502	114504	114501	114507
'18 - '20 JL Wrangler (Sport, Sport S, Sahara, Rubicon) Front doors only	111252	111254	111251	N/A
'07 - '18 JK Wrangler (Front doors only, all styles)	111142	111144	111141	111147
'97 - '06 TJ Wrangler	110552	110554	110551	110557
'02 - '12 KJ Liberty (Caution: Ground clearance problem on stock vehicle)	114502	114504	114501	114507
'93 - '98 Grand Cherokee	114032	114034	114031	114037
<b>MAZDA</b>				
'91 - '94 Navajo	114032	114034	114031	114037
'98 - '11 B-Series P/U 2-Door Only	114992	114994	114991	114997
'83 - '93 B-Series P/U	114032	114034	114031	114037
<b>MERCEDES</b>				
'10 - '20 Sprinter Van	115772	115774	115771	115777
<b>MITSUBISHI</b>				
'78 - '94 P/U	114032	114034	114031	114037
'83 - '99 Montero	114032	114034	114031	114037
'97 - '02 Montero Sport	114032	114034	114031	114037
<b>NISSAN</b>				
'98 - '01 Frontier Reg cab	114032	114034	114031	114037
'02 - '20 Frontier (All Cabs)	114032	114034	114031	114037
'00 - '16 Xterra (Front doors)	114032	114034	114031	114037
'86 - '01 Pathfinder	114032	114034	114031	114037
'86 - '97 Hardbody P/U	114032	114034	114031	114037
'72 - '86 P/U	114032	114034	114031	114037
<b>TOYOTA</b>				
'05 - '20 Tacoma Crew Cab (All Doors)	114502	114504	114501	114507
'01 - '04 Tacoma Crew Cab (All Doors)	114032	114034	114031	114037
'05 - '20 Tacoma / Prerunner	114502	114504	114501	114507
'96 - '04 Tacoma / Prerunner	114032	114034	114031	114037
'00 - '20 Tundra	114502	114504	114501	114507
'01 - '07 Sequoia	114502	114504	114501	114507
'74 - '95 P/U	114032	114034	114031	114037
'05 - '09 4 Runner	114502	114504	114501	114507
'84 - '04 4 Runner	114032	114034	114031	114037
'91 - '98 FJ80 Land Cruiser	114032	114034	114031	114037
'80 - '91½ FJ60/FJ62 L/C	114032	114034	114031	114037
'07 - '14 FJ Cruiser	114502	114504	114501	114507

NOTE: Vehicles not listed have no applications  
 \* Will fit gas engine pickups to allow the steps to extend an additional 1 inch.  
 \*\* Does not fit vehicles with saddle tanks.





# SUPER HOOP



**MADE  
IN THE  
USA**

## THE SUPER HOOP

The stylish and innovative design of these steps adds to a vehicle's rugged off-road look. Available in three low-maintenance, extremely durable finishes. This step is made to compliment your vehicle's appearance and is easily installed with our multi-mount system for superior strength and rigidity.

### FEATURES

- Made of corrosion-resistant, durable cast aluminum alloy
- Rugged tread pattern provides a safe and attractive non-slip surface
- Rocker panel installation provides for the strongest and easiest installation of any step products
- Unique design gives the vehicle a rugged off-road look, while also maintaining a stylish accent for today's vehicles
- Limited lifetime warranty on materials and craftsmanship



XM3

#### POLISHED

CARR's Xtreme Mechanical Polished finish won't rust, crack or peel and requires very little maintenance.



XP4

#### TITANIUM SILVER

CARR's Xtreme Titanium Silver Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.



XP3

#### BLACK

CARR's Xtreme Black Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.

**DIMENSION:** Large 20" width

**STEP PAD:** Exclusive diamond, nonslip tread pattern

**STEP:** Flat step area for increased safety



# SUPER HOOP APPLICATIONS



CHEVY/GMC	XM3 POLISH	XP4 SILVER	XP3 BLACK	XP7 YELLOW
'15 - '20 Colorado/Canyon	123332	123334	123331	123337
'02 - '09 Trail Blazer/Envoy	124032	124034	124031	124037
'02 - '13 Avalanche	124032	124034	124031	124037
'02 - '20 Denali Truck	124032	124034	124031	124037
'20 Sierra/Silverado 2500-3500 C&K P/U/Fullsize all cabs All doors (GAS AND DIESEL)	123332	123334	123331	123337
'19 - '20 Sierra/Silverado 1500 C&K P/U/Fullsize all cabs (All doors)	123332	123334	123331	123337
'88 - '19 Sierra/Silverado 1500 C&K P/U/Fullsize all cabs (All doors) 2018 Body Style/Light Duty	124032	124034	124031	124037
'88 - '19 Sierra/Silverado 2500/3500 HD all doors	124032	124034	124031	124037
'11 - '19 *Sierra/Silverado 2500/3500 HD all cabs (DIESEL ONLY)	126332	126334	126331	126337
'88 - '18 Fullsize Crew Cab 1500-3500 (All doors)	124032	124034	124031	124037
'73 - '87 **Fullsize Pick-ups/Blazer/Suburban	124032	124034	124031	124037
'76 - '91 Suburban	124032	124034	124031	124037
'76 - '93 S10/Sonoma pickups, Blazer/Jimmy	124032	124034	124031	124037
'67 - '96 Fullsize Van	124032	124034	124031	124037
<b>DODGE</b>				
'19 - '20 Ram GAS 1500 NEW BODY STYLE	129112	129114	129111	129117
'09 - '20 Ram GAS 1500-5500 CLASSIC BODY STYLE	129772	129774	129771	129777
'09 - '20 Ram DIESEL 2500-5500 P/U beds only	129772	129774	129771	129777
'11 - '20 * Ram DIESEL 3500-5500 Chassis beds only	127442	127444	127441	127447
'09 - '10 Ram DIESEL 3500-5500 Chassis beds only	129772	129774	129771	129777
'94 - '08 Ram 1500-5500	124032	124034	124031	124037
'74 - '93 Fullsize P/U	124032	124034	124031	124037
'97 - '09 Dakota 2-Door Only	124032	124034	124031	124037
'02 - '06 Sprinter Van	124502	124504	124501	124507
'07 - '09 Sprinter Van	125772	125774	125771	125777
'74 - '92 Ram Charger	124032	124034	124031	124037
'83 - '91 Raider	124032	124034	124031	124037
<b>FORD/MERCURY</b>				
'17 - '20 Super Duty Aluminum body F250 - F550 DOES NOT FIT standard cabs (single cabs)	128222	128224	128221	128227
'99 - '16 Super Duty All Cabs (All Doors)	124872	124874	124871	124877
'15 - '20 F-150 Aluminum body All door/All cabs	128222	128224	128221	128227
'04 - '14 F-150 All Cabs (All Doors)	124032	124034	124031	124037
'01 - '03 F150 SuperCrew (All Doors)	124032	124034	124031	124037
'97 - '04 F-150/F-250 LD/F-150 Heritage P/U (All Doors)	124032	124034	124031	124037
'97 - '03 F-150 Quad Cab (All Doors)	124032	124034	124031	124037
'81 - '96 F150 & 250 Light Duty P/U/Bronco All Doors/All Cabs	120252	120254	120251	120257
'81 - '98 F250-550 Heavy Duty P/U All Doors/All Cabs	120252	120254	120251	120257
'19 - '20 Ranger Super Crew - 4 door	124502	124504	124501	124507
'19 - '20 Ranger Super Cab - Front doors only	124502	124504	124501	124507
'98 - '11 Ranger 2-Door Only	124992	124994	124991	124997
'00 - '05 Excursion (All Doors)	124872	124874	124871	124877
'18 - '20 Expedition (All Doors)	128222	128224	128221	128227
'97 - '17 Expedition (All Doors)	124032	124034	124031	124037
'91 - '01 Explorer (not Eddie Bauer)	124032	124034	124031	124037
'96 - '01 Mercury Mountaineer	124032	124034	124031	124037
'95 - '96 F150 Lightning	120252	120254	120251	120257
'75½ - '02 Fullsize E-Series Van	124032	124034	124031	124037
'05 - '14 Fullsize E-Series Van	124032	124034	124031	124037
'15 - '20 E-Series Cutaway Cab	124032	124034	124031	124037
NO-DRILL APPLICATION '99-'16 Super Duty (All Cabs/All Doors)	125002	125004	125001	125007

ISUZU	XM3 POLISH	XP4 SILVER	XP3 BLACK	XP7 YELLOW
'84 - '02 Trooper	124032	124034	124031	124037
'91 - '02 Rodeo	124032	124034	124031	124037
'91 - '02 Amigo	124032	124034	124031	124037
'89 - '93 P/U	124032	124034	124031	124037
<b>JEEP</b>				
'06 - '10 Commander	124502	124504	124501	124507
'07 - '18 JK Wrangler (Front doors only, all styles)	121242	121244	121241	121247
'97 - '06 TJ Wrangler	120552	120554	120551	120557
'02 - '12 KJ Liberty (Caution: Ground clearance problem on stock vehicle)	124502	124504	124501	124507
'93 - '98 Grand Cherokee	124032	124034	124031	124037
<b>MAZDA</b>				
'91 - '94 Navajo	124032	124034	124031	124037
'98 - '11 B-Series P/U 2-Door Only	124992	124994	124991	124997
'83 - '93 B-Series P/U	124032	124034	124031	124037
<b>MERCEDES</b>				
'10 - '20 Sprinter Van	125772	125774	125771	125777
<b>MITSUBISHI</b>				
'78 - '94 P/U	124032	124034	124031	124037
'83 - '99 Montero	124032	124034	124031	124037
'97 - '02 Montero Sport	124032	124034	124031	124037
<b>NISSAN</b>				
'98 - '01 Frontier Reg cab	124032	124034	124031	124037
'02 - '20 Frontier (All Cabs)	124032	124034	124031	124037
'00 - '16 Xterra (Front doors)	124032	124034	124031	124037
'86 - '01 Pathfinder	124032	124034	124031	124037
'86 - '97 Hardbody P/U	124032	124034	124031	124037
'72 - '86 P/U	124032	124034	124031	124037
<b>TOYOTA</b>				
'05 - '20 Tacoma Crew Cab (All Doors)	124502	124504	124501	124507
'01 - '04 Tacoma Crew Cab (All Doors)	124032	124034	124031	124037
'05 - '20 Tacoma / Prerunner	124502	124504	124501	124507
'96 - '04 Tacoma / Prerunner	124032	124034	124031	124037
'00 - '20 Tundra	124502	124504	124501	124507
'01 - '07 Sequoia	124502	124504	124501	124507
'74 - '95 P/U	124032	124034	124031	124037
'05 - '09 4 Runner	124502	124504	124501	124507
'84 - '04 4 Runner	124032	124034	124031	124037
'91 - '98 FJ80 Land Cruiser	124032	124034	124031	124037
'80 - '91½ FJ60/FJ62 L/C	124032	124034	124031	124037
'07 - '14 FJ Cruiser	124502	124504	124501	124507

NOTE: Vehicles not listed have no applications

\* Will fit gas engine pickups to allow the steps to extend an additional 1 inch.

\*\* Does not fit vehicles with saddle tanks.



# HOOP II



## THE HOOP II

This uniquely designed diamond tread pattern provides a safe, non-slip surface on the flat step area. Our exclusive multi-mount system is designed for a precision fit and easier installation. The Hoop II step is constructed from extremely strong die-cast aluminum alloy for maximum quality and durability.

### FEATURES

- Made of corrosion-resistant, durable cast aluminum alloy
- Rugged tread pattern provides a safe and attractive non-slip surface
- Rocker panel installation provides one of the strongest and easiest installations on the market
- Unique design gives the vehicle a rugged off-road look, while also maintaining a stylish accent for today's vehicles
- Limited lifetime warranty on materials and craftsmanship



XM3

#### POLISHED

CARR's Xtreme Mechanical Polished finish won't rust, crack or peel and requires very little maintenance.



XP4

#### TITANIUM SILVER

CARR's Xtreme Titanium Silver Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.



XP3

#### BLACK

CARR's Xtreme Black Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.

**DIMENSION:** Compact 10" width

**STEP PAD:** Exclusive diamond, non-slip tread pattern

**STEP:** Flat step area for increased safety

MADE  
IN THE  
USA





# HOOP II APPLICATIONS



CHEVY/GMC	XM3 POLISH	XP4 SILVER	XP3 BLACK	XP7 YELLOW
'15 - '20 Colorado/Canyon	103332	103334	103331	103337
'02 - '09 Trail Blazer/Envoy	103992	103994	103991	103997
'02 - '13 Avalanche	103992	103994	103991	103997
'02 - '20 Denali Truck	103992	103994	103991	103997
'20 Sierra/Silverado 2500-3500 C&K P/U/Fullsize all cabs All doors (GAS AND DIESEL)	103332	103334	103331	103337
'19 - '20 Sierra/Silverado 1500 C&K P/U/Fullsize all cabs (All doors)	103332	103334	103331	103337
'88 - '19 Sierra/Silverado 1500 C&K P/U/Fullsize all cabs (All doors) - 2018 Body Style/Light Duty	103992	103994	103991	103997
'88 - '19 Sierra/Silverado 2500/3500 HD all doors	103992	103994	103991	103997
'11 - '19 *Sierra/Silverado 2500/3500 HD all cabs (DIESEL ONLY)	106332	106334	106331	106337
'88 - '18 Fullsize Crew Cab 1500-3500 (All doors)	103992	103994	103991	103997
'73 - '87 **Fullsize Pick-ups/Blazer/Suburban	103992	103994	103991	103997
'76 - '91 Suburban	103992	103994	103991	103997
'76 - '93 S10/Sonoma pickups, Blazer/Jimmy	103992	103994	103991	103997
'67 - '96 Fullsize Van	103992	103994	103991	103997
<b>DODGE</b>				
'19 - '20 Ram GAS 1500 NEW BODY STYLE	109112	109114	109111	109117
'09 - '20 Ram GAS 1500-5500 CLASSIC BODY STYLE	109772	109774	109771	109777
'09 - '20 Ram DIESEL 2500-5500 P/U beds only	109772	109774	109771	109777
'11 - '20 * Ram DIESEL 3500-5500 Chassis beds only	107442	107444	107441	107447
'09 - '10 Ram DIESEL 3500-5500 Chassis beds only	109772	109774	109771	109777
'94 - '08 Ram 1500-5500	103992	103994	103991	103997
'74 - '93 Fullsize P/U	103992	103994	103991	103997
'97 - '09 Dakota 2-Door Only	103992	103994	103991	103997
'14 - '20 ProMaster Van - Front doors only	105772	105774	105771	105777
'02 - '06 Sprinter Van	104502	104504	104501	104507
'07 - '09 Sprinter Van	105772	105774	105771	105777
'74 - '92 Ram Charger	103992	103994	103991	103997
'83 - '91 Raider	103992	103994	103991	103997
<b>FORD/MERCURY</b>				
'17 - '20 Super Duty Aluminum body F250 - F550 DOES NOT FIT standard cabs (single cabs)	108222	108224	108221	108227
'99 - '16 Super Duty All Cabs (All Doors)	104812	104814	104811	104817
'15 - '20 F-150 Aluminum body All door/All cabs	108222	108224	108221	108227
'04 - '14 F-150 All Cabs (All Doors)	103992	103994	103991	103997
'01 - '03 F150 SuperCrew (All Doors)	103992	103994	103991	103997
'97 - '04 F-150/F-250 LD/F-150 Heritage P/U (All Doors)	103992	103994	103991	103997
'97 - '03 F-150 Quad Cab (All Doors)	103992	103994	103991	103997
'81 - '96 F150 & 250 Light Duty/P/U/Bronco All Doors/All Cabs	102522	102524	102521	102527
'81 - '98 F250-550 Heavy Duty P/U All Doors/All Cabs	102522	102524	102521	102527
'19 - '20 Ranger Super Crew - 4 door	104502	104504	104501	104507
'19 - '20 Ranger Super Cab - 4 door	104502	104504	104501	104507
'98 - '11 Ranger 2-Door Only	104992	104994	104991	104997
'00 - '05 Excursion (All Doors)	104812	104814	104811	104817
'18 - '20 Expedition (All Doors)	108222	108224	108221	108227
'97 - '17 Expedition (All Doors)	103992	103994	103991	103997
'91 - '01 Explorer (not Eddie Bauer)	103992	103994	103991	103997
'96 - '01 Mercury Mountaineer	103992	103994	103991	103997
'95 - '96 F150 Lightning	102522	102524	102521	102527
'75½ - '02 Fullsize E-Series Van	103992	103994	103991	103997
'05 - '14 Fullsize E-Series Van	103992	103994	103991	103997
'15 - '20 E-Series Cutaway Cab	103992	103994	103991	103997
'15 - '19 E-Series Cutaway Cab	103992	103994	103991	103997

ISUZU	XM3 POLISH	XP4 SILVER	XP3 BLACK	XP7 YELLOW
'84 - '02 Trooper	103992	103994	103991	103997
'91 - '02 Rodeo	103992	103994	103991	103997
'91 - '02 Amigo	103992	103994	103991	103997
'89 - '93 P/U	103992	103994	103991	103997
<b>JEEP</b>				
'06 - '10 Commander	104502	104504	104501	104507
'18 - '20 JL Wrangler (Sport, Sport S, Sahara, Rubicon) Front doors only	101252	101254	101251	N/A
'07 - '18 JK Wrangler (All doors, all styles)	101242	101244	101241	101247
'07 - '18 JK Wrangler (Front doors only, all styles)	101242	101244	101241	101247
'97 - '06 TJ Wrangler	102552	102554	102551	102557
'02 - '12 KJ Liberty (Caution: Ground clearance problem on stock vehicle)	104502	104504	104501	104507
'93 - '98 Grand Cherokee	103992	103994	103991	103997
<b>MAZDA</b>				
'91 - '94 Navajo	103992	103994	103991	103997
'98 - '11 B-Series P/U 2-Door Only	104992	104994	104991	104997
'83 - '93 B-Series P/U	103992	103994	103991	103997
<b>MERCEDES</b>				
'10 - '20 Sprinter Van	105772	105774	105771	105777
<b>MITSUBISHI</b>				
'78 - '94 P/U	103992	103994	103991	103997
'83 - '99 Montero	103992	103994	103991	103997
'97 - '02 Montero Sport	103992	103994	103991	103997
<b>NISSAN</b>				
'98 - '01 Frontier Reg cab	103992	103994	103991	103997
'02 - '20 Frontier (All Cabs)	103992	103994	103991	103997
'00 - '16 Xterra (Front doors)	103992	103994	103991	103997
'00 - '16 Xterra (Rear doors)	103992	103994	103991	103997
'86 - '01 Pathfinder	103992	103994	103991	103997
'86 - '97 Hardbody P/U	103992	103994	103991	103997
'72 - '86 P/U	103992	103994	103991	103997
<b>TOYOTA</b>				
'05 - '20 Tacoma Crew Cab (All Doors)	104502	104504	104501	104507
'01 - '04 Tacoma Crew Cab (All Doors)	103992	103994	103991	103997
'05 - '20 Tacoma / Prerunner	104502	104504	104501	104507
'96 - '04 Tacoma / Prerunner	103992	103994	103991	103997
'00 - '20 Tundra	104502	104504	104501	104507
'01 - '07 Sequoia	104502	104504	104501	104507
'74 - '95 P/U	103992	103994	103991	103997
'05 - '09 4 Runner	104502	104504	104501	104507
'84 - '04 4 Runner	103992	103994	103991	103997
'91 - '98 FJ80 Land Cruiser	103992	103994	103991	103997
'80 - '91½ FJ60/FJ62 L/C	103992	103994	103991	103997
'07 - '14 FJ Cruiser	104502	104504	104501	104507

NOTE: Vehicles not listed have no applications

\* Will fit gas engine pickups to allow the steps to extend an additional 1 inch.

\*\* Does not fit vehicles with saddle tanks.



# WORK TRUCK STEP

## CARGO VAN STEP (REAR AND SIDE DOORS)

### WORK TRUCK STEP

Gives safe and easy access to the side and top rack of any service truck where exterior tool boxes are used.

MADE  
IN THE  
USA

#### FEATURES

- Hands-free
- Fully assembled
- 500 lb. weight capacity
- Easy to install and easy to use
- Conveniently tucked away when not in use
- When in the "out" position, both feet fit on the step
- Large 31", 24" or 12" non-skid step surface for increased safety
- Limited lifetime warranty on all materials and craftsmanship
- Push on step to deploy, push back in again to lock when not in use!



Load Capacity  
**500 lb.**

#### HEAVY DUTY AND HANDS-FREE

#### DEPLOY AND CLOSE WITH YOUR FEET



#### WORK TRUCK STEP APPLICATIONS

XP3 BLACK XP7 YLW

	XP3 BLACK	XP7 YLW
WTS 12" CS (Cast Step)	*501010	N/A
WTS 24" GSS (Grip Strut Step)	*501020	*501027
WTS 12" GSS (Grip Strut Step)	*501030	*501037
'03 - '20 24" WTS - Chevy Cargo Van (Grip Strut) (Side door)	501050	501057
WTS 31" Deployable Platform Step (Grip Strut)	*501060	*501067
'13 - '20 24" WTS - Ford Transit Van (Grip Strut) (Side door)	501070	501077
'13 - '20 24" WTS - Ford Transit Van (Grip Strut) (Rear door)	501079	501977
'12 - '20 24" WTS - Mercedes Sprinter (Grip Strut) (Side door)	501080	501087
'14 - '20 24" WTS - Dodge Promaster Van (Grip Strut) (Side door)	501090	501097

\*NOTE: These steps fit any flat surface with access to the other side.

### CARGO VAN STEP

This hands-free deployable step gives you maximum safety and accessibility when entering and exiting the side door of your van. Reduces a van's step height by at least 7 inches.

#### HEAVY-DUTY AND HANDS-FREE

#### FEATURES

MADE  
IN THE  
USA

- Hands-free
- Fully assembled
- 500 lb. weight capacity
- Easy to use and install
- Conveniently tucked away when not in use
- When in the "out" position, both feet fit on step
- Large 24" non-skid step surface for increased safety
- Limited lifetime warranty on all materials and craftsmanship
- Push on step to deploy, push back in again to lock when not in use!



Load Capacity  
**500 lb.**



#### CARGO VAN / Transit Vehicles WORK TRUCK STEP APPLICATIONS

XM4 MATTE XP7 YLW

	XM4 MATTE	XP7 YLW
'03 - '20 24" WTS - Chevy Cargo Van (Grip Strut) (Side door)	501050	501057
'13 - '20 24" WTS - Ford Transit Van (Grip Strut) (Side door)	501070	501077
'13 - '20 24" WTS - Ford Transit Van (Grip Strut) (Rear door)	501079	501977
'12 - '20 24" WTS - Mercedes Sprinter (Grip Strut) (Side door)	501080	501087
'14 - '20 24" WTS - Dodge Promaster Van (Grip Strut) (Side door)	501090	501097

# FACTORY STEP GRAB HANDLES



## FACTORY STEP

### FEATURES

- Safer entry and exit from your van
- 20" wide fully functional step area
- Made from heavy gauge steel, plated and powder coated for superior protection
- Exclusive perforated step area for solid footing
- Rated at 500 lb. weight capacity
- Super easy installation
- Limited lifetime warranty on materials and craftsmanship



Load Capacity  
**500 lb.**

MADE  
IN THE  
USA



### FACTORY STEP APPLICATIONS

XP3 BLACK

XP7 YLW

	XP3 BLACK	XP7 YLW
'15 - '20 Ford Transit Vans (Excluding the Connect) - Pair	451001	451007
'10 - '20 Mercedes Sprinter Van - Pair	451011	451017

\*NOTE: Excluding the Connect for fitment

## GRAB HANDLES

### FEATURES

- Easy bolt-on installation
- Cast from alloyed aluminum
- Powder coated and polished finishes
- Secure grip for added safety



MADE  
IN THE  
USA



### GRAB HANDLE APPLICATIONS

XM3  
POLISHED

XP3  
BLACK

XP7  
YLW

	XM3 POLISHED	XP3 BLACK	XP7 YLW
Grab Handle 10"	200032	200031	200037
Grab Handle 20"	200042	200041	200047





# MEGA STEP HD MEGA STEP

MADE  
IN THE  
USA

## MEGA STEP FEATURES

- Heavy-duty foldable steps are large—14” by 6”
- Specifically developed for all 2” and 2-1/2” hitch receivers
- Flat-mount version also available with hardware
- Safe and easy access to any vehicle with a trailer hitch
- Back plate and the deck are made out of heavy-duty aluminum alloy
- Fold down for use and then fold back up when not in use
- Has a 500 lb. weight capacity
- Simple to install and use
- Limited lifetime warranty




### MEGA STEP APPLICATIONS (SOLD AS SINGLES)

	XP3 BLACK	XM4 MATTE	XP7 YLW
Mega Step Flat Mount	190001	190005	190007
Mega Hitch Step 2 and 2 1/2” receivers	190011	190015	190017

## HD MEGA STEP FEATURES

- Heavy-duty foldable steps are large—14” by 8”
- Illuminated with grab handle slots
- Flat-mount version also available with hardware
- Safe and easy access to any vehicle with a 2” or 2-1/2” hitch receivers
- Back plate and the deck are made out of heavy-duty aluminum alloy
- Fold down for use and then fold back up when not in use
- Has a 500 lb. weight capacity
- Simple to install and use
- Limited lifetime warranty
- NFPA Compliant

**HEAVY DUTY** Load Capacity  
**500 lb.**

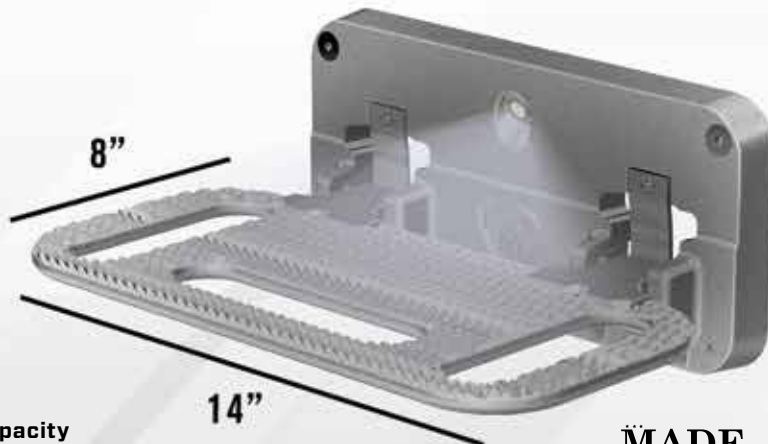

MADE  
IN THE  
USA

### HD MEGA STEP APPLICATIONS (SOLD AS SINGLES)

	XP3 BLACK	XM3 POLISHED	XP7 YLW
HD Mega Step Flat Mount - with LED light	193001	193002	193007
HD Mega Hitch Step 2 and 2 1/2” receivers - with LED light	193011	193012	193017
HD Mega Step Retro Fit (Fire Trucks only) - with LED light	-	193022	-
HD Mega Step Flat Mount - no light	194001	194002	194007
HD Mega Hitch Step 2 and 2 1/2” receivers - no light	194011	194012	194017



**UTILITY/MUNICIPALITY  
FIRE/ EMERGENCY**



**MADE  
IN THE  
USA**



**Steps and  
Grab Handles  
Available in  
Safety Yellow**



**LD STEP**  
Additional 1" Depth Step Area  
14" Width



**HOOP II**  
10" Width



**SUPER HOOP**  
20" Width



**20" GRAB HANDLE**



**10" GRAB HANDLE**



**MEGA STEP**  
14X6 Folding Step  
(Flat Mount and Hitch Step)



**HD MEGA STEP**  
14X8 Folding Step with Built-in  
Grab Handle/Optional Lighting  
(Flat Mount and Hitch Step)



**FACTORY VAN STEP**  
20" Width



**24" DEPLOYABLE  
WORK TRUCK STEP**




**12" DEPLOYABLE  
WORK TRUCK STEP**



**EMERGENCY  
VEHICLES**



**HD MEGA STEP**  
NFPA Compliant

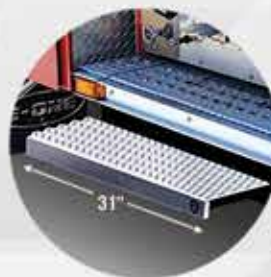

**31" WORK TRUCK STEP**  
NFPA Compliant

**MADE  
IN THE  
USA**





# HD HITCH STEP



**MADE  
IN THE  
USA**



**HOLDS UP TO  
650 lb.**

## HD UNIVERSAL HITCH STEP

### FEATURES

- Non-slip surface
- Requires standard pin and clip
- Folds up when not in use
- Provides easy access to back of vehicle
- Fits all 2" hitch receivers



### GRAPHICS FOR HD UNIVERSAL HITCH STEPS



### HD UNIVERSAL HITCH STEPS APPLICATIONS (SOLD AS SINGLES)

XP3 BLACK

Universal Hitch Step - Blank	183012
Universal Hitch Step - USA	183022
Universal Hitch Step - American Flag	183032
Universal Hitch Step - Horse	183042
Universal Hitch Step - MY TOY	183052
Universal Hitch Step - CARR logo	183062
Universal Hitch Step - Checkered Flags	183082
Universal Hitch Step - U.S. Marines	183142
Universal Hitch Step - Dirt Bike	183152
Universal Hitch Step - Quad	183162
Universal Hitch Step - Pick-up	183172
Universal Hitch Step - Jeep	183182
Universal Hitch Step - SUV	183192
Universal Hitch Step - U.S. Coast Guard	183202
Universal Hitch Step - Fire & Rescue	183212
Universal Hitch Step - Law Enforcement	183222
Universal Hitch Step - U.S. National Guard	183232
Universal Hitch Step - Reflector	183242
Universal Hitch Step - Black Out (All Black)	183252



# JL 180° LIGHT MOUNT LIGHT WINGS



Use the JL 180° to easily adjust additional vehicle lighting without tools or hassle. Lights on each side together provide 360 coverage for off-road, camping, and recreational use.

## JL 180° LIGHT MOUNT

The JL 180° Light Mount is designed for effortless 180° light rotation on the driver and passenger side of a JL Wrangler. It securely mounts to the A-Pillar factory holes and can accommodate 3" lights. Featuring a simple pull pin design, the JL 180 Light Mount has 7 different rotation positions—perfect for on-the-fly adjustments.

### FEATURES

- Durable powder coat for corrosion protection and rugged use
- Easily adjustable 180° rotating feature
- Precise fit using factory holes
- Antenna cutout
- Super easy install
- Solid mount with virtually no vibration
- Accommodates 3" lights

### JEEP JL 180 LIGHT MOUNT APPLICATIONS XP3 BLACK

18 - '20	JL Wrangler All Styles	210291
'18 - '20	JT Gladiator All Styles	210291

## LIGHT WING MOUNTING SYSTEM

The CARR Light Wing mounts to virtually any bumper with a solid mounting area for the vehicle license plate. The Light Wing is extremely universal, and most vehicles do not require a mounting kit. Its unique style accents your vehicle's appearance. The durable cast aluminum alloy is available in three corrosion-resistant finishes.

### BLACK

CARR's Xtreme Black Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.



XP3

### TITANIUM SILVER

CARR's Xtreme Titanium Silver Powder Coat finish features a lightly textured matte finish that resists scratches, peeling and fading.



XP4

### CHROME

CARR's Xtreme Chrome Plated Aluminum features the luster of chrome that will not rust.



XC3



### FEATURES

### LIGHTS NOT INCLUDED

- 36" wing span
- Universal design that can easily mount to virtually any bumper that has a solid mounting area for the vehicle license plate
- Wing swept design contours to today's trucks and SUVs
- Will fit urethane bumpers as long as there is a metal sub-structure behind the urethane cover
- Strong die-cast construction
- Solid mount with virtually no vibration
- Special keyed security bolt to protect your investment
- Affordable alternative to expensive grille guards

### LIGHT WING APPLICATIONS XP4 SILVER XP3 BLACK XC3 CHROME

LIGHT WING	167304	167301	167303
------------	--------	--------	--------



# XRS JEEP ROTA LIGHT BAR LIGHT BARS

## XRS JEEP ROTA LIGHT BARS

### FEATURES

- Absolutely no drilling or cutting
- Bar rotates down for additional clearance
- Mounts to existing factory holes



**WILL ACCOMMODATE LED LIGHTS**

**LIGHTS NOT INCLUDED**



**MADE  
IN THE  
USA**

**JK Jeep Wrangler** All Styles

2007-2018 PART # 210221

**TJ Jeep Wrangler**

1997-2006 PART # 210661

**CJ7/YJ Jeep Wrangler**

1976-1995 PART # 210881

## DELUXE, DELUXE ROTA & M-PROFILE LIGHT BARS

Available in three finishes. The XM3 bars feature a stainless steel crossbar. The XP3 and XP4 bars feature a powder coated crossbar. All light bars are designed to securely mount to the roof gutter of vehicles with internal gutters, and can be installed with our stainless steel gutter mount kit. All CARR light bars come with special bolts that are keyed to protect your investment.



**LIGHTS NOT INCLUDED**

**ALL OF OUR LIGHT BARS WILL ACCOMMODATE LED AND RALLY LIGHTS**



### DELUXE LIGHT BAR

#### FEATURES

- Wide cast aluminum mounting base
- Universal fit



### DELUXE ROTA LIGHT BAR

#### FEATURES

- A CARR exclusive feature that allows the light bar to rotate down for extra clearance or to protect your lighting investment
- Universal fit



### M-PROFILE LIGHT BAR

#### FEATURES

- Medium profile design looks attractive on any vehicle
- Universal fit

## RAIN GUTTER KITS FOR LIGHT BARS PAGES 15 - 20

Our Rain Gutter brackets are now available in stainless steel and black powder coated stainless steel. All of these brackets are uniquely designed to fit your vehicle, and our roof-mounted light bars simply clamp on to these brackets for an easy and secure installation.

# LIGHT BARS



## DELUXE, DELUXE ROTA & M-PROFILE LIGHT BARS

CHEVY/GMC	DELUXE LIGHT BAR			DELUXE ROTA BAR			M-PROFILE BAR			RAIN GUTTERS	
	XM3 POL	XP4 SLV	XP3 BLK	XM3 POL	XP4 SLV	XP3 BLK	XM3 POL	XP4 SLV	XP3 BLK	KIT Stainless	KIT XP3 Black
'15 - '20 Colorado/Canyon	210342	210344	210341	210872	210874	210871	210702	210704	210701	220062	220061
'04 - '14 Colorado/Canyon	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'02 - '09 Trail Blazer/Envoy	210342	210344	210341	210872	210874	210871	210702	210704	210701	220542	220541
'02 - '13 Avalanche	210342	210344	210341	210872	210874	210871	210702	210704	210701	220542	220541
'02 - '20 Denali Truck	210342	210344	210341	210872	210874	210871	210702	210704	210701	220542	220541
'19 - '20 Sierra/Silverado C&K PU / Fullsize & HD	210342	210344	210341	210872	210874	210871	210702	210704	210701	220062	220061
'14 - '18 Sierra/Silverado C&K PU / Fullsize & HD	210342	210344	210341	210872	210874	210871	210702	210704	210701	220062	220061
'00 - '13 Sierra/Silverado C&K PU / Fullsize & HD	210342	210344	210341	210872	210874	210871	210702	210704	210701	220542	220541
'88 - '99 Sierra/Silverado C&K PU / Fullsize	210342	210344	210341	210872	210874	210871	210702	210704	210701	223412	223411
'14 - '20 Fullsize Crew Cab 1500-3500 (All doors)	210342	210344	210341	210872	210874	210871	210702	210704	210701	220062	220061
'00 - '13 Fullsize Crew Cab	210342	210344	210341	210872	210874	210871	210702	210704	210701	220542	220541
'92 - '99 Fullsize Crew Cab	210342	210344	210341	210872	210874	210871	210702	210704	210701	223412	223411
'73 - '91 Fullsize Crew Cab	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'73 - '87 Fullsize Pick-up	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'00 - '18 Suburban/Yukon XL Tahoe/Yukon	210342	210344	210341	210872	210874	210871	210702	210704	210701	220542	220541
'92 - '99 Suburban	210342	210344	210341	210872	210874	210871	210702	210704	210701	223412	223411
'76 - '91 Suburban	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'92 - '99 Yukon/Tahoe	210342	210344	210341	210872	210874	210871	210702	210704	210701	223412	223411
'76 - '93 S10/Sonoma pickup, Blazer/Jimmy	210342	210344	210341	210872	210874	210871	210702	210704	210701	220042	220041
'67 - '96 Fullsize Van	210342	210344	210341	210872	210874	210871	N/A	N/A	N/A	NR	NR
<b>DODGE</b>											
'19 - '20 Ram 1500 NEW BODY STYLE All Cabs/All Doors	210342	210344	210341	210872	210874	210871	210702	210704	210701	220062	220061
'19 - '20 Ram 1500 All Cabs/All Doors CLASSIC	210342	210344	210341	210872	210874	210871	210702	210704	210701	220082	220081
'19 - '20 Ram 2500-5500 All Cabs/All Doors	210342	210344	210341	210872	210874	210871	210702	210704	210701	220082	220081
'14 - '18 Ram 1500-5500 All Cabs/All Doors	210342	210344	210341	210872	210874	210871	210702	210704	210701	220082	220081
'09 - '13 Ram 1500 All Cabs/All Doors	210342	210344	210341	210872	210874	210871	210702	210704	210701	220062	220061
'02 - '08 Ram 1500 All Cabs/All Doors	210342	210344	210341	210872	210874	210871	210702	210704	210701	220542	220541
'94 - '01 Ram 1500 Pickups All Cabs/All Doors	210342	210344	210341	210872	210874	210871	210702	210704	210701	221502	221501
'03 - '13 Ram 2500-5500 All Cabs/All Doors	210342	210344	210341	210872	210874	210871	210702	210704	210701	220062	220061
'94 - '02 Ram 2500-5500 All Cabs/All Doors	210342	210344	210341	210872	210874	210871	210702	210704	210701	221502	221501
'74 - '93 Fullsize Pickup	210342	210344	210341	210872	210874	210871	N/A	N/A	N/A	NR	NR
'05 - '09 Durango	210342	210344	210341	210872	210874	210871	210702	210704	210701	220542	220541
'05 - '11 Dakota	210342	210344	210341	210872	210874	210871	210702	210704	210701	220542	220541
'97 - '04 Dakota	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'74 - '92 Ram Charger	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'83 - '91 Raider	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
<b>FORD/MERCURY</b>											
'99 - '16 Super Duty All Cabs	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'19 - '20 Ranger - All Styles	210342	210344	210341	210872	210874	210871	210702	210704	210701	220062	220061
'04 - '14 F-150	210342	210344	210341	210872	210874	210871	N/A	N/A	N/A	220062	220061
'81 - '96 F150 & 250 Light Duty/Pickup/Bronco	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'81 - '98 F250-550 Heavy Duty Pickup	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'67 - '80 Fullsize Pick-up/Bronco	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'00 - '05 Excursion	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'91 - '01 Explorer (not Eddie Bauer)	210342	210344	210341	210872	210874	210871	210702	210704	210701	222742	222741
'96 - '01 Mercury Mountaineer (Same as Explorer)	210342	210344	210341	210872	210874	210871	210702	210704	210701	222742	222741
'95 - '96 F150 Lightning	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'75½ - '02 Fullsize E-Series Van	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'05 - '14 Fullsize E-Series Van	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR

NOTE: Vehicles not listed have no applications





# LIGHT BARS

## DELUXE, DELUXE ROTA & M-PROFILE LIGHT BARS

	DELUXE LIGHT BAR			DELUXE ROTA BAR			M-PROFILE BAR			RAIN GUTTERS	
	XM3 POL	XP4 SLV	XP3 BLK	XM3 POL	XP4 SLV	XP3 BLK	XM3 POL	XP4 SLV	XP3 BLK	KIT Stainless	KIT XP3 Black
<b>ISUZU</b>											
'84 - '02 Trooper	210342	210344	210341	210872	210874	210871	210702	210704	210701	220042	220041
'91 - '02 Rodeo	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'91 - '02 Amigo	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'89 - '93 Pick-up	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
<b>JEEP</b>											
'05 - '20 Grand Cherokee	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'93 - '98 Grand Cherokee	210342	210344	210341	210872	210874	210871	210702	210704	210701	223412	223411
'06 - '10 Commander	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'84 - '00 Cherokee	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
<b>MAZDA</b>											
'91 - '94 Navajo	210342	210344	210341	210872	210874	210871	210702	210704	210701	222742	222741
'83 - '93 B-Series Pick-up	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
<b>MINI</b>											
'78 - '94 Pick-up	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'83 - '99 Montero	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'97 - '02 Montero Sport	210342	210344	210341	210872	210874	210871	210702	210704	210701	220042	220041
<b>NISSAN</b>											
'98 - '01 Frontier Reg cab	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'02 - '20 Frontier Crew Cab	210342	210344	210341	210872	210874	210871	210702	210704	210701	220062	220061
'00 - '16 Xterra - Without option roof rack	210342	210344	210341	210872	210874	210871	210702	210704	210701	220062	220061
'04 - '11 Pathfinder	210342	210344	210341	210872	210874	210871	210702	210704	210701	220062	220061
'86 - '97 Hardbody P/U	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'72 - '86 Pick-up	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
<b>TOYOTA</b>											
'05 - '20 Tacoma/Prerunner/Crew Cab	210342	210344	210341	210872	210874	210871	210702	210704	210701	220042	220041
'96 - '04 Tacoma/Prerunner/Crew Cab	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'07 - '20 Tundra	210342	210344	210341	210872	210874	210871	210702	210704	210701	220042	220041
'00 - '06 Tundra	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'01 - '07 Sequoia	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'89 - '95 Pick-up	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'74 - '88 Pick-up	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'05 - '07 4 Runner	210342	210344	210341	210872	210874	210871	210702	210704	210701	220042	220041
'96 - '04 4 Runner	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'84 - '95 4 Runner	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'93 - '99 T-100	210342	210344	210341	210872	210874	210871	210702	210704	210701	220052	220051
'80 - '91½ FJ60/FJ62 L/C	210342	210344	210341	210872	210874	210871	210702	210704	210701	NR	NR
'07 - '14 FJ Cruiser	210342	210344	210341	210872	210874	210871	210702	210704	210701	220042	220041

NOTE: Vehicles not listed have no applications



## LOW PROFILE & C-PROFILE ROTA LIGHT BARS

**MADE  
IN THE  
USA**

**LIGHTS NOT INCLUDED**

Available in three finishes, the XM3 bars feature a stainless steel crossbar. The XP3 and XP4 bars feature a powder coated crossbar. All light bars are designed to securely mount to the roof gutter of many vehicles with internal gutters, and can be installed with our stainless steel gutter mount kit. All CARR light bars come with special bolts that are keyed to protect your investment.

ALL OF OUR LIGHT BARS WILL ACCOMMODATE LED AND RALLY LIGHTS



### LOW PROFILE LIGHT BAR

#### FEATURES

- Low profile design gives your truck a subtle appearance



### C-PROFILE ROTA LIGHT BAR

#### FEATURES

- Universal fit
- Cast end brackets made of heavy gauge steel
- Easy installation
- Crossbar rotates 180 degrees
- Stylish with rugged durability



# LIGHT BARS

## LOW PROFILE, C-PROFILE ROTA LIGHT BARS

CHEVY/GMC	LOW PROFILE		C-PROFILE ROTA BAR			RAIN GUTTERS	
	XP4 SILVER	XP3 BLACK	XM3 POL	XP4 SILVER	XP3 BLACK	STAINLESS	XP3 BLACK
'15 - '20 Colorado/Canyon	210504	210501	210112	210114	210111	220062	220061
'04 - '14 Colorado/Canyon	210504	210501	210112	210114	210111	220052	220051
'02 - '09 Trail Blazer/Envoy	210504	210501	210112	210114	210111	220542	220541
'02 - '13 Avalanche	210504	210501	210112	210114	210111	220542	220541
'02 - '20 Denali Truck	210504	210501	210112	210114	210111	220542	220541
'19 - '20 Sierra/Silverado C&K PU / Fullsize & HD	210504	210501	210112	210114	210111	220062	220061
'14 - '18 Sierra/Silverado C&K PU / Fullsize & HD	210504	210501	210112	210114	210111	220062	220061
'00 - '13 Sierra/Silverado C&K PU / Fullsize & HD	210504	210501	210112	210114	210111	220542	220541
'88 - '99 Sierra/Silverado C&K PU / Fullsize	210504	210501	210112	210114	210111	223412	223411
'14 - '20 Fullsize Crew Cab 1500-3500 (All doors)	N/A	N/A	210112	210114	210111	220062	220061
'00 - '13 Fullsize Crew Cab	210504	210501	210112	210114	210111	220542	220541
'92 - '99 Fullsize Crew Cab	N/A	N/A	210112	210114	210111	223412	223411
'73 - '91 Fullsize Crew Cab	N/A	N/A	210112	210114	210111	NR	NR
'73 - '87 Fullsize Pick-up	N/A	N/A	210112	210114	210111	NR	NR
'00 - '18 Suburban/Yukon XL Tahoe/Yukon	N/A	N/A	210112	210114	210111	220542	220541
'92 - '99 Suburban	N/A	N/A	210112	210114	210111	223412	223411
'76 - '91 Suburban	N/A	N/A	210112	210114	210111	NR	NR
'92 - '99 Yukon/Tahoe	N/A	N/A	210112	210114	210111	223412	223411
'76 - '93 S10/Sonoma pickup, Blazer/Jimmy	N/A	N/A	210112	210114	210111	220042	220041
'67 - '96 Fullsize Van	N/A	N/A	210112	210114	210111	NR	NR
<b>DODGE</b>							
'19 - '20 Ram 1500 NEW BODY STYLE All Cabs/All Doors	N/A	N/A	210112	210114	210111	220062	220061
'19 - '20 Ram 1500 All Cabs/All Doors CLASSIC	N/A	N/A	210112	210114	210111	220082	220081
'19 - '20 Ram 2500-5500 All Cabs/All Doors	N/A	N/A	210112	210114	210111	220082	220081
'14 - '18 Ram 1500-5500 All Cabs/All Doors	N/A	N/A	210112	210114	210111	220082	220081
'09 - '13 Ram 1500 All Cabs/All Doors	N/A	N/A	210112	210114	210111	220062	220061
'02 - '08 Ram 1500 All Cabs/All Doors	210504	210501	210112	210114	210111	220542	220541
'94 - '01 Ram 1500 Pickups All Cabs/All Doors	210504	210501	210112	210114	210111	221502	221501
'03 - '13 Ram 2500-5500 All Cabs/All Doors	N/A	N/A	210112	210114	210111	220062	220061
'94 - '02 Ram 2500-5500 All Cabs/All Doors	N/A	N/A	210112	210114	210111	221502	221501
'74 - '93 Fullsize Pickup	N/A	N/A	210112	210114	210111	NR	NR
'05 - '09 Durango	N/A	N/A	210112	210114	210111	220542	220541
'05 - '11 Dakota	N/A	N/A	210112	210114	210111	220542	220541
'97 - '04 Dakota	210504	210501	210112	210114	210111	220052	220051
'74 - '92 Ram Charger	N/A	N/A	210112	210114	210111	NR	NR
'83 - '91 Raider	N/A	N/A	210112	210114	210111	NR	NR
<b>FORD/MERCURY</b>							
'99 - '16 Super Duty All Cabs	N/A	N/A	210112	210114	210111	220052	220051
'19 - '20 Ranger - All Styles	210504	210501	210112	210114	210111	220062	220061
'04 - '14 F-150	N/A	N/A	210112	210114	210111	220062	220061
'81 - '96 F150 & 250 Light Duty/Pickup/Bronco	N/A	N/A	210112	210114	210111	NR	NR
'81 - '98 F250-550 Heavy Duty Pickup	N/A	N/A	210112	210114	210111	NR	NR
'67 - '80 Fullsize Pick-up/Bronco	N/A	N/A	210112	210114	210111	NR	NR
'00 - '05 Excursion	N/A	N/A	210112	210114	210111	220052	220051
'91 - '01 Explorer (not Eddie Bauer)	N/A	N/A	210112	210114	210111	222742	222741
'96 - '01 Mercury Mountaineer (Same as Explorer)	N/A	N/A	210112	210114	210111	222742	222741
'95 - '96 F150 Lightning	N/A	N/A	210112	210114	210111	NR	NR
'75½ - '02 Fullsize E-Series Van	N/A	N/A	210112	210114	210111	NR	NR
'05 - '14 Fullsize E-Series Van	N/A	N/A	210112	210114	210111	NR	NR

NOTE: Vehicles not listed have no applications



# LIGHT BARS



## LOW PROFILE, C-PROFILE ROTA LIGHT BARS

	LOW PROFILE		C-PROFILE ROTA BAR			RAIN GUTTER KIT	
	XP4 SILVER	XP3 BLACK	XM3 POL	XP4 SILVER	XP3 BLACK	STAINLESS	XP3 BLACK
<b>ISUZU</b>							
'84 - '02 Trooper	N/A	N/A	210112	210114	210111	220042	220041
'91 - '02 Rodeo	N/A	N/A	210112	210114	210111	220052	220051
'91 - '02 Amigo	N/A	N/A	210112	210114	210111	220052	220051
'89 - '93 Pick-up	N/A	N/A	210112	210114	210111	NR	NR
<b>JEEP</b>							
'05 - '20 Grand Cherokee	210504	210501	210112	210114	210111	220052	220051
'93 - '98 Grand Cherokee	N/A	N/A	210112	210114	210111	223412	223411
'06 - '10 Commander	210504	210501	210112	210114	210111	220052	220051
'84 - '00 Cherokee	N/A	N/A	210112	210114	210111	NR	NR
<b>MAZDA</b>							
'91 - '94 Navajo	N/A	N/A	210112	210114	210111	222742	222741
'83 - '93 B-Series Pick-up	210504	210501	210112	210114	210111	220052	220051
<b>MITSUBISHI</b>							
'78 - '94 Pick-up	N/A	N/A	210112	210114	210111	NR	NR
'83 - '99 Montero	N/A	N/A	210112	210114	210111	NR	NR
'97 - '02 Montero Sport	N/A	N/A	210112	210114	210111	220042	220041
<b>NISSAN</b>							
'98 - '01 Frontier Reg cab	210504	210501	210112	210114	210111	220052	220051
'02 - '20 Frontier Crew Cab	210504	210501	210112	210114	210111	220062	220061
'00 - '16 Xterra - Without option roof rack	210504	210501	210112	210114	210111	220062	220061
'04 - '11 Pathfinder	N/A	N/A	210112	210114	210111	220062	220061
'86 - '97 Hardbody P/U	N/A	N/A	210112	210114	210111	220052	220051
'72 - '86 Pick-up	N/A	N/A	210112	210114	210111	NR	NR
<b>TOYOTA</b>							
'05 - '20 Tacoma/Prerunner/Crew Cab	N/A	N/A	210112	210114	210111	220042	220041
'96 - '04 Tacoma/Prerunner/Crew Cab	210504	210501	210112	210114	210111	220052	220051
'07 - '20 Tundra	N/A	N/A	210112	210114	210111	220042	220041
'00 - '06 Tundra	210504	210501	210112	210114	210111	220052	220051
'01 - '07 Sequoia	210504	210501	210112	210114	210111	220052	220051
'89 - '95 Pick-up	N/A	N/A	210112	210114	210111	220052	220051
'74 - '88 Pick-up	N/A	N/A	210112	210114	210111	NR	NR
'05 - '07 4 Runner	210504	210501	210112	210114	210111	220042	220041
'96 - '04 4 Runner	210504	210501	210112	210114	210111	220052	220051
'84 - '95 4 Runner	N/A	N/A	210112	210114	210111	220052	220051
'93 - '99 T-100	N/A	N/A	210112	210114	210111	220052	220051
'80 - '91½ FJ60/FJ62 L/C	N/A	N/A	210112	210114	210111	NR	NR
'07 - '14 FJ Cruiser	N/A	N/A	210112	210114	210111	220042	220041

NOTE: Vehicles not listed have no applications



# PROMO ITEMS

## PROMOTIONAL ITEMS

### T-SHIRT (BLACK SHIRT) PART #

SMALL	994411
MEDIUM	994412
LARGE	994413
X-LARGE	994414
XX-LARGE	994415



### PART # 993334



### ICE CREAM SCOOP

### PART # 996661



## POP DISPLAY

### FEATURES

- Increase sales and awareness with 'point of purchase' displays
- Includes actual step samples for customers to see and touch
- Pockets with tri-fold brochures to show complete product line
- P/N 993334 and P/N 993337 mount to slatwall or pegboard while P/N 993336 sets on the floor against a wall
- Full color with graphics, descriptions and features

### PART # 993337



### ADDED FEATURES

- Factory direct
- Free freight
- Proven to increase sales
- 24" x 30" wall mount color poster
- Actual CARR steps
- Twenty-five mini-catalogs
- Get preferred dealer status

## TRI-FOLD BROCHURES

### FEATURES

### PART # 993334F

- 8 1/2" x 3 3/4" tri-fold brochures fit into accessible display pocket
- Shows product lines, descriptions, styles and features



## CARR WORK TRUCK DISPLAY

### FEATURES

### PART # 993336

- Work Truck Step
- Mega Step
- Grab Handle
- 25 Tri-Fold Brochures

**INTERACTIVE DISPLAY THAT YOU CAN DEPLOY, STAND ON AND RETRACT**

